



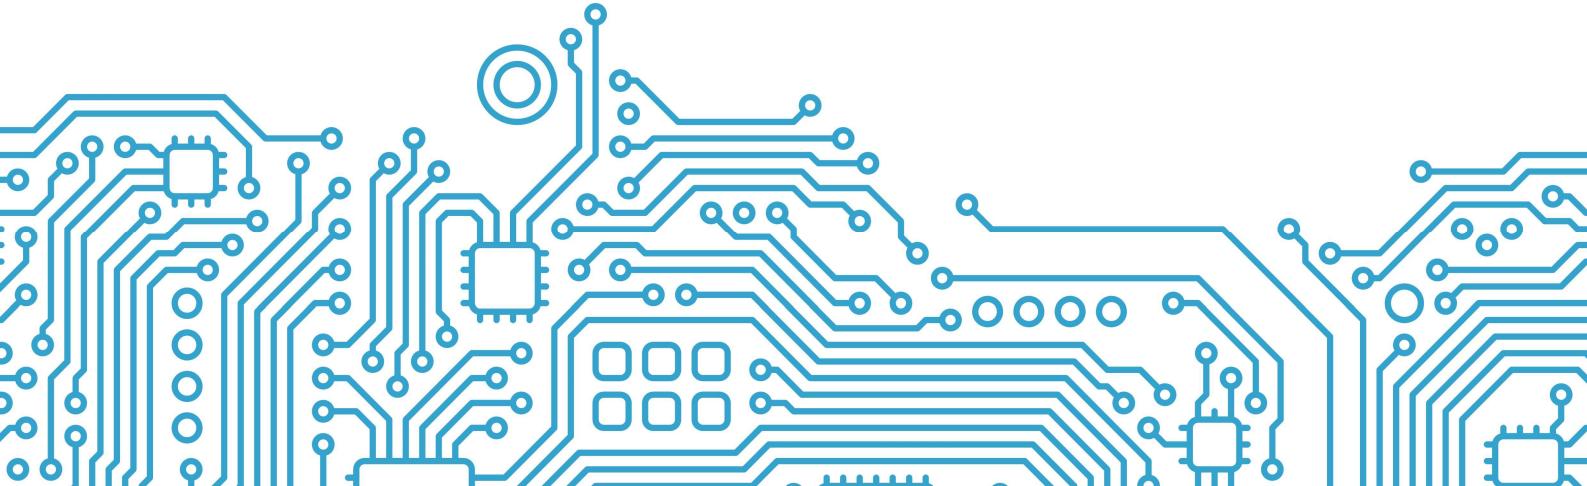

SM_BLANC(GA)_50R32_INVERTER_EU_NA_171214

BLANC INVERTER SERIES

2017 SERVICE MANUAL

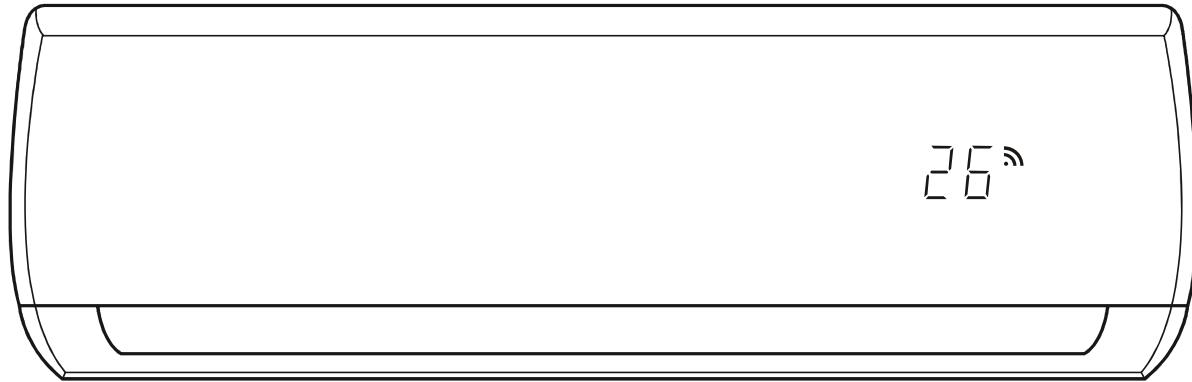

Maintenance and Disassembly

Contents

1.	Maintenance	22
1.1	First Time Installation Check	22
1.2	Refrigerant Recharge.....	24
1.3	Re-Installation	25
1.3.1	Indoor Unit	25
1.3.2	Outdoor Unit	27
2.	Disassembly	29
2.1	Indoor Unit.....	29
2.2	Outdoor Unit.....	41

1. Maintenance

1.1 First Time Installation Check

Air and moisture trapped in the refrigerant system affects the performance of the air conditioner by:


- Increasing pressure in the system.
- Increasing the operating current.
- Decreasing the cooling or heating efficiency.
- Congesting the capillary tubing due to ice build-up in the refrigerant circuit.
- Corroding the refrigerant system.

To prevent air and moisture from affecting the air conditioner's performance, the indoor unit, as well as the pipes between the indoor and outdoor unit, must be leak tested and evacuated.

Leak test (soap water method)

Use a soft brush to apply soapy water or a neutral liquid detergent onto the indoor unit connections and outdoor unit connections. If there is gas leakage, bubbles will form on the connection.


Air purging with vacuum pump

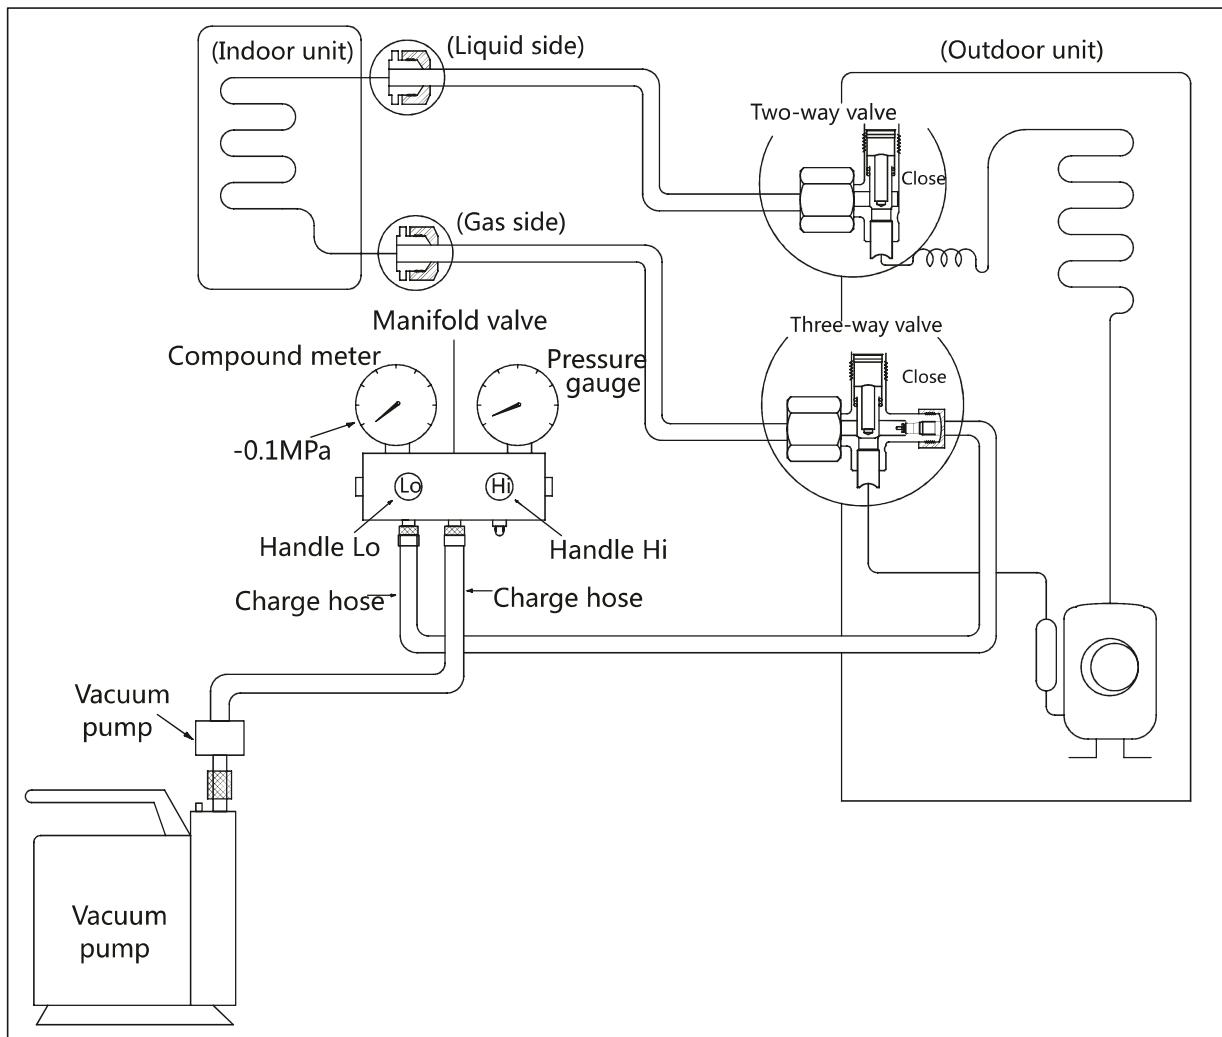

Procedure:

1. Tighten the flare nuts of the indoor and outdoor units, and confirm that both the 2- and 3-way valves are closed.
2. Connect the charge hose with the push pin of Handle Lo to the gas service port of the 3-way valve.
3. Connect another charge hose to the vacuum pump.
4. Fully open the Handle Lo manifold valve.
5. Using the vacuum pump, evacuate the system for 30 minutes.
 - a. Check whether the compound meter indicates -0.1 MPa (14.5 Psi).
 - If the meter does not indicate -0.1 MPa (14.5 Psi) after 30 minutes, continue evacuating for an additional 20 minutes.
 - If the pressure does not achieve -0.1 MPa (14.5 Psi) after 50 minutes, check for leakage.
6. If the pressure successfully reaches -0.1 MPa (14.5 Psi), fully close the Handle Lo valve, then cease vacuum pump operations.
 - b. Wait for 5 minutes then check whether the gauge needle moves after turning off the vacuum pump. If the gauge needle moves backward, check whether there is gas leakage.
7. Loosen the flare nut of the 3-way valve for 6 or 7 seconds and then tighten the flare nut again.
 - a. Confirm the pressure display in the pressure indicator is slightly higher than the atmospheric pressure.
 - b. Remove the charge hose from the 3-way valve.
7. Fully open the 2- and 3-way valves and tighten the cap of the 2- and 3-way valves.

1.2 Refrigerant Recharge

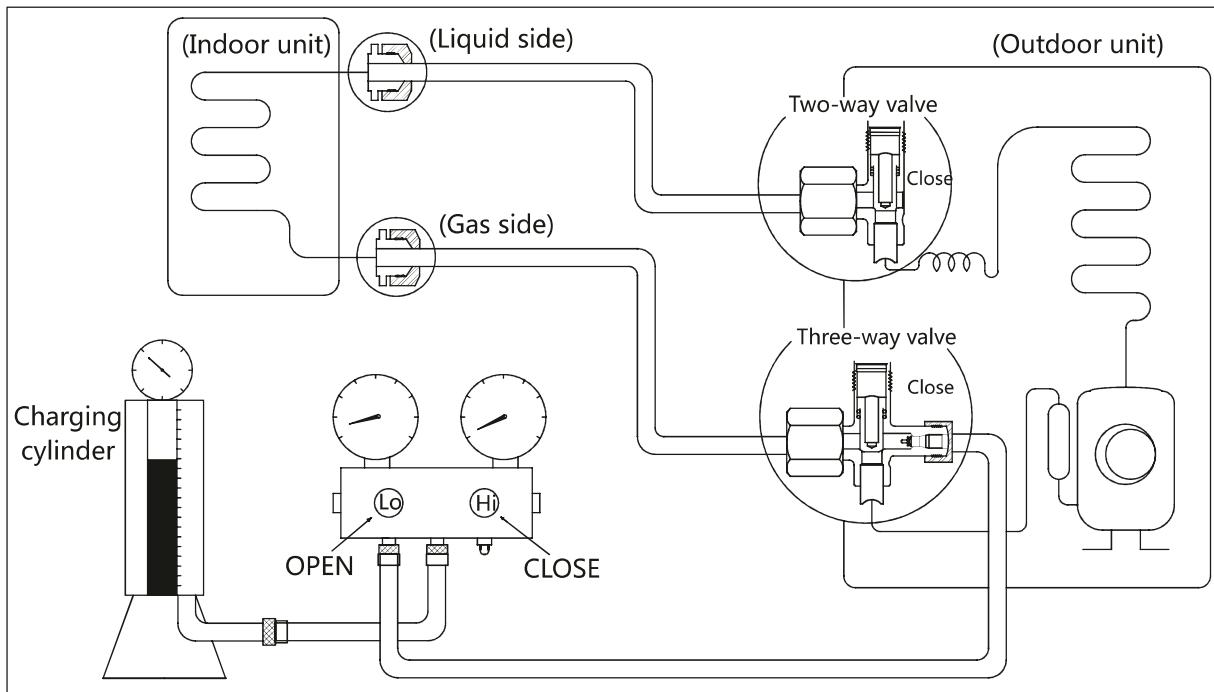

Prior to recharging the refrigerant, confirm the additional amount of refrigerant required using the following table:

Models	Standard length	Max. elevation	Max. length	Additional refrigerant
9k&12k	5m (16.4ft)	10m (32.8ft)	25m (82.0ft)	12g/m (0.13oz/ft)
18k	5m (16.4ft)	20m (65.6ft)	30m (98.4ft)	12g/m (0.13oz/ft)
24k	5m (16.4ft)	25m (82ft)	50m (164ft)	24g/m (0.26oz/ft)

Procedure:

1. Close both 2- and 3-way valves.
2. Slightly connect the Handle Lo charge hose to the 3-way service port.
3. Connect the charge hose to the valve at the bottom of the cylinder.
4. If the refrigerant is R410A, invert the cylinder to ensure a complete liquid charge.
5. Open the valve at the bottom of the cylinder for 5 seconds to purge the air in the charge hose, then fully tighten the charge hose with push pin Handle Lo to the service port of 3-way valve..
6. Place the charging cylinder onto an electronic scale and record the starting weight.
7. Fully open the Handle Lo manifold valve, 2- and 3-way valves.
8. Operate the air conditioner in cooling mode to charge the system with liquid refrigerant.
9. When the electronic scale displays the correct weight (refer to the gauge and the pressure of the low side to confirm), turn off the air conditioner, then disconnect the charge hose from the 3-way service port immediately..
10. Mount the caps of service port and 2- and 3-way valves.
11. Use a torque wrench to tighten the caps to a torque of 18 N.m.
12. Check for gas leakage.

Troubleshooting

Contents

1.	Safety Caution	62
2.	General Troubleshooting	63
3.	Error Diagnosis and Troubleshooting Without Error Code.....	64
3.1	Remote maintenance.....	64
3.2	Field maintenance	65
4.	Quick Maintenance by Error Code.....	70
5.	Troubleshooting by Error Code.....	71
5.1	Common Check Procedures.....	71
5.2	E0/F4/EA (EEPROM parameter error)	73
5.3	E1 (Indoor and outdoor unit communication error)	74
5.4	E2 (Zero crossing detection error diagnosis and solution)	76
5.5	E3/F5 (Fan speed has been out of control diagnosis and solution)	77
5.6	E4/E5/F1/F2/F3 (Open circuit or short circuit of temperature sensor diagnosis and solution).....	79
5.7	Eb(Communication error between the indoor PCB and display board).....	80
5.8	F0(Overload current protection diagnosis and solution).....	81
5.9	P0(IPM malfunction or IGBT over-strong current protection diagnosis and solution).....	82
5.10	P1(Over voltage or too low voltage protection diagnosis and solution).....	83


Contents

5.11 P2(High temperature protection of IPM module or compressor top diagnosis and solution).....	84
5.12 P4(Inverter compressor drive error diagnosis and solution)	85


1. Safety Caution

⚠️ WARNING

**Electricity remains in capacitors even when the power supply is off.
Ensure the capacitors are fully discharged before troubleshooting.**

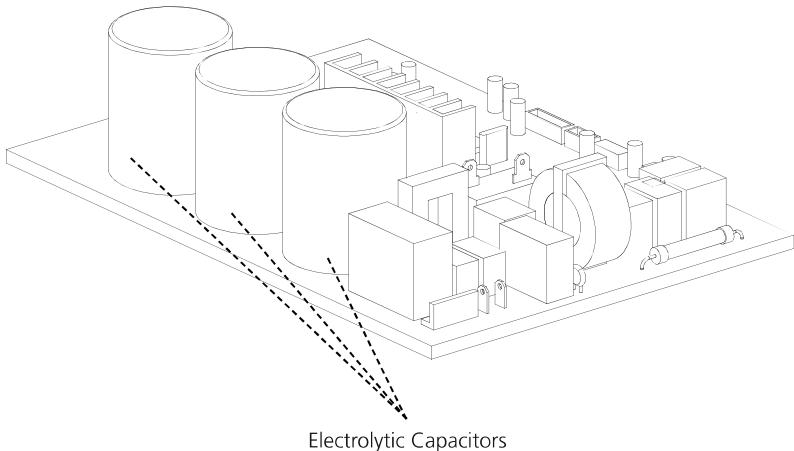

For other models, connect discharge resistance (approx. 100Ω 40W) or a soldering iron plug between the positive and negative terminals of the electrolytic capacitor. The terminals are located on the bottom surface of the outdoor PCB.

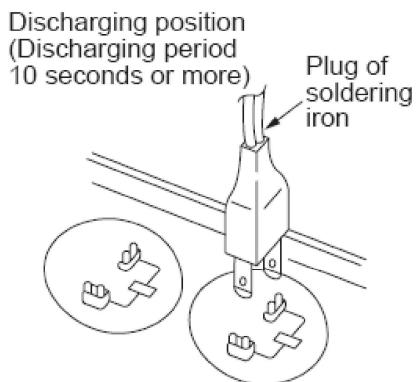

Note: This picture is for reference only. Actual appearances may vary.

2. General Troubleshooting

2.1 Error Display (Indoor Unit)

When the indoor unit encounters a recognized error, the indicator light will flash in a corresponding series, the timer display may turn on or begin flashing, and an error code will be displayed. These error codes are described in the following table:

Display	LED STATUS	Solution
E0/ER	Indoor unit EEPROM parameter error	Page 73
E1	Indoor / outdoor units communication error	Page 74
E2	Zero-crossing signal detection error	Page 76
E3	The indoor fan speed is operating outside of the normal range	Page 77
E4	Indoor room temperature sensor T1 is in open circuit or has short circuited	Page 79
E5	Evaporator coil temperature sensor T2 is in open circuit or has short circuited	Page 79
E6	Communication error between the indoor PCB and display board	Page 80
F0	Overload current protection	Page 81
F1	Outdoor ambient temperature sensor T4 open circuit or short circuit	Page 79
F2	Condenser coil temperature sensor T3 is in open circuit or has short circuited	Page 79
F3	Compressor discharge temperature sensor TP open circuit or short circuit	Page 79
F4	Outdoor unit EEPROM parameter error	Page 73
F5	Outdoor fan speed operating outside of the normal range	Page 77
P0	IPM malfunction or IGBT over-strong current protection	Page 82
P1	Over voltage or over low voltage protection	Page 83
P2	High temperature protection of IPM module	Page 84
P4	Inverter compressor drive error	Page 85

For other errors:

The display board may show a garbled code or a code undefined by the service manual. Ensure that this code is not a temperature reading.

Troubleshooting:

Test the unit using the remote control. If the unit does not respond to the remote, the indoor PCB requires replacement. If the unit responds, the display board requires replacement.

3. Error Diagnosis and Troubleshooting Without Error Code



WARNING

Be sure to turn off unit before any maintenance to prevent damage or injury.

3.1 Remote maintenance

SUGGESTION: When troubles occur, please check the following points with customers before field maintenance.

	Problem	Solution
1	Unit will not start	Page 66-67
2	The power switch is on but fans will not start	Page 66-67
3	The temperature on the display board cannot be set	Page 66-67
4	Unit is on but the wind is not cold(hot)	Page 66-67
5	Unit runs, but shortly stops	Page 66-67
6	The unit start ups and stops frequently	Page 66-67
7	Unit runs continuously but insufficient cooling(heating)	Page 66-67
8	Cool can not change to heat	Page 66-67
9	Unit is noisy	Page 66-67

3.2 Field maintenance

	Problem	Solution
1	Unit will not start	Page 68-69
2	Compressor will not start but fans run	Page 68-69
3	Compressor and condenser (outdoor) fan will not start	Page 68-69
4	Evaporator (indoor) fan will not start	Page 68-69
5	Condenser (Outdoor) fan will not start	Page 68-69
6	Unit runs, but shortly stops	Page 68-69
7	Compressor short-cycles due to overload	Page 68-69
8	High discharge pressure	Page 68-69
9	Low discharge pressure	Page 68-69
10	High suction pressure	Page 68-69
11	Low suction pressure	Page 68-69
12	Unit runs continuously but insufficient cooling	Page 68-69
13	Too cool	Page 68-69
14	Compressor is noisy	Page 68-69
15	Horizontal louver can not revolve	Page 68-69

1.Remote Maintenance	Electrical Circuit	Refrigerant Circuit
Possible causes of trouble		
Unit will not start	☆ Power failure ☆ The main power tripped ☆ Loose connections ☆ Faulty transformer ☆ The voltage is too high or too low	The remote control is powered off Broken remote control Dirty air filter Dirty condenser fins The setting temperature is higher/lower than the room's(cooling/heating)
The power switch is on but fans will not start	☆ ☆ ☆	The ambient temperature is too high/low when the mode is cooling/heating
The temperature on the display board cannot be set	☆	Fan mode
Unit is on but the wind is not cold(hot)		SILENCE function is activated(optional function)
Unit runs, but shortly stops	☆	Frosting and defrosting frequently
The unit starts up and stops frequently	☆	
Unit runs continuously but insufficient cooling(heating)	☆ ☆ ☆	
Cool can not change to heat	☆ ☆ ☆	
Unit is noisy	☆ ☆ ☆	
Test method / remedy		
Test voltage	Test voltage	
Close the power switch	Close the power switch	
Inspect connections - tighten	Inspect connections - tighten	
Change the transformer	Change the transformer	
Test voltage	Test voltage	
Replace the battery of the remote control	Replace the battery of the remote control	
Replace the remote control	Replace the remote control	
Clean or replace	Clean or replace	
Clean	Clean	
Adjust the setting temperature	Adjust the setting temperature	
Turn the AC later	Turn the AC later	
Adjust to cool mode	Adjust to cool mode	
Turn off SILENCE function.	Turn off SILENCE function.	
Turn the AC later	Turn the AC later	

Others							
Check heat load	☆☆						Heavy load condition
Tighten bolts or screws	☆						Loosen hold down bolts and / or screws
Close all the windows and doors		☆					Bad airproof
Remove the obstacles			☆				The air inlet or outlet of either unit is blocked
Reconnect the power or press ON/OFF button on remote control to restart					☆		Interference from cell phone towers and remote boosters
Remove them							Shipping plates remain attached

2.Field Maintenance		Electrical Circuit														
Possible causes of trouble		Power failure	Blown fuse or varistor	Loose connections	Shorted or broken wires	Safety device opens	Faulty thermostat / room temperature sensor	Wrong setting place of temperature sensor	Faulty transformer	Shorted or open capacitor	Faulty magnetic contactor for compressor	Faulty magnetic contactor for fan	Low voltage	Faulty stepping motor	Shorted or grounded compressor	Shorted or grounded fan motor
Unit will not start		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	
Compressor will not start but fans run				☆	☆				☆	☆				☆		
Compressor and condenser (outdoor) fan will not start				☆	☆					☆						
Evaporator (indoor) fan will not start				☆					☆		☆	☆			☆	
Condenser (Outdoor) fan will not start				☆		☆			☆		☆	☆			☆	
Unit runs, but shortly stops										☆		☆		☆		
Compressor short-cycles due to overload										☆		☆		☆		
High discharge pressure																
Low discharge pressure																
High suction pressure																
Low suction pressure																
Unit runs continuously but insufficient cooling																
Too cool							☆	☆								
Compressor is noisy																
Horizontal louver can not revolve			☆	☆									☆			
Test method / remedy		Test voltage	Inspect fuse type & size	Inspect connections - tighten	Test circuits with tester	Test continuity of safety device	Test continuity of thermostat / sensor & wiring	Place the temperature sensor at the central of the air inlet grille	Check control circuit with tester	Check capacitor with tester	Test continuity of coil & contacts	Test continuity of coil & contacts	Test voltage	Replace the stepping motor	Check resistance with multimeter	Check resistance with multimeter

Refrigerant Circuit						Others	
Replace the compressor	☆	☆	☆	☆	☆	Compressor stuck	
Leak test	☆	☆	☆	☆	☆	Shortage of refrigerant	
Replace restricted part	☆	☆	☆	☆	☆	Restricted liquid line	
Clean or replace	☆	☆	☆	☆	☆	Dirty air filter	
Clean coil	☆	☆	☆	☆	☆	Dirty evaporator coil	
Check fan	☆	☆	☆	☆	☆	Insufficient air through evaporator coil	
Change charged refrigerant volume	☆	☆	☆	☆	☆	Overcharge of refrigerant	
Clean condenser or remove obstacle	☆	☆	☆	☆	☆	Dirty or partially blocked condenser	
Purge, evacuate and recharge	☆	☆	☆	☆	☆	Air or incompressible gas in refrigerant cycle	
Remove obstruction to air flow	☆	☆	☆	☆	☆	Short cycling of condensing air	
Remove obstruction in air or water flow	☆	☆	☆	☆	☆	High temperature condensing medium	
Remove obstruction in air or water flow	☆	☆	☆	☆	☆	Insufficient condensing medium	
Replace compressor	☆	☆	☆	☆	☆	Broken compressor internal parts	
Test compressor efficiency	☆	☆	☆	☆	☆	Inefficient compressor	
Replace valve	☆	☆	☆	☆	☆	Expansion valve obstructed	
Replace valve	☆	☆	☆	☆	☆	Expansion valve or capillary tube closed completely	
Replace valve	☆	☆	☆	☆	☆	Leaking power element on expansion valve	
Fix feeler bulb	☆	☆	☆	☆	☆	Poor installation of feeler bulb	
Check heat load	☆	☆	☆	☆	☆	Heavy load condition	
Tighten bolts or screws	☆	☆	☆	☆	☆	Loosen hold down bolts and / or screws	
Remove them	☆	☆	☆	☆	☆	Shipping plates remain attached	
Choose AC of larger capacity or add the number of AC	☆	☆	☆	☆	☆	Poor choices of capacity	
Rectify piping so as not to contact each other or with external plate	☆	☆	☆	☆	☆	Contact of piping with other piping or external plate	

4. Quick Maintenance by Error Code

If you do not have the time to test whether specific parts are faulty, you can directly change the required parts according to the error code.

You can find the parts to replace by error code in the following table.

Part requiring replacement	Error Code								
	E0	E1	E2	E3	E4	E5	E6	E7	E8
Indoor PCB	✓	✓	✓	✓	✓	✓	✓	x	x
Outdoor PCB	x	x	✓	x	x	x	x	✓	✓
Reactor	x	x	✓	x	x	x	x	x	x
Indoor fan motor	x	x	x	✓	x	x	x	x	x
Outdoor fan motor	x	x	x	X	x	x	x	x	x
Temperature sensor	x	x	x	x	✓	✓	x	x	✓
Compressor	x	x	x	x	x	x	x	✓	x
IPM board	x	x	x	x	x	x	x	x	x
Display Board	x	x	x	x	x	x	✓	x	x
Outdoor unit	x	x	x	x	x	x	x	✓	x

Part requiring replacement	Error Code							
	F2	F3	F4	F5	F6	F7	F8	F9
Indoor PCB	x	x	x	x	x	x	x	x
Outdoor PCB	✓	✓	✓	✓	✓	✓	✓	✓
Reactor	x	x	x	x	x	✓	x	x
Indoor fan motor	x	x	x	x	x	x	x	x
Outdoor fan motor	x	x	x	✓	x	x	x	x
Temperature sensor	✓	✓	x	x	x	x	x	x
Compressor	x	x	x	x	✓	x	x	✓
IPM board	x	x	x	x	x	✓	✓	✓
Over Load Protector (OLP)	x	x	x	x	x	x	✓	x
Outdoor unit	x	x	x	x	x	x	x	x

5. Troubleshooting by Error Code

5.1 Common Check Procedures

5.1.1 Temperature Sensor Check

Disconnect the temperature sensor from PCB, measure the resistance value with a tester.

Temperature Sensors.

Room temp.(T1) sensor,

Indoor coil temp.(T2) sensor,

Outdoor coil temp.(T3) sensor,


Outdoor ambient temp.(T4) sensor,

Compressor discharge temp.(Tp) sensor.

Measure the resistance value of each winding by using the multi-meter.

5.1.2 Compressor checking

Measure the resistance value of each winding by using the tester.

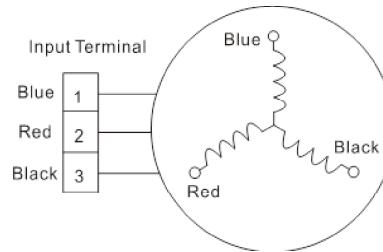

Position	Resistance Value		
	KSK89D53UEZ	KSM135D23UFZ	KTF235D22UMT
Blue - Red			
Blue - Black	2.35Ω(20°C/68°F)	1.28Ω(20°C/68°F)	0.75Ω(20°C/68°F)
Red - Blue			



5.1.3 IPM Continuity Check

Turn off the power, let the large capacity electrolytic capacitors discharge completely, and dismount the IPM. Use a digital tester to measure the resistance between P and UVWN; UVW and N.

Digital tester		Normal resistance value	Digital tester		Normal resistance value
(+)Red	(-)Black	∞ (Several MΩ)	(+)Red	(-)Black	∞ (Several MΩ)
P	N		U	V	
	U		V	W	
	V		W		
	W		(+)Red		


5.2 E0/F4/EA (EEPROM parameter error)

Description: Indoor or outdoor PCB main chip does not receive feedback from EEPROM chip.

Recommended parts to prepare:


- Faulty indoor PCB
- Faulty outdoor PCB

Troubleshooting and repair:

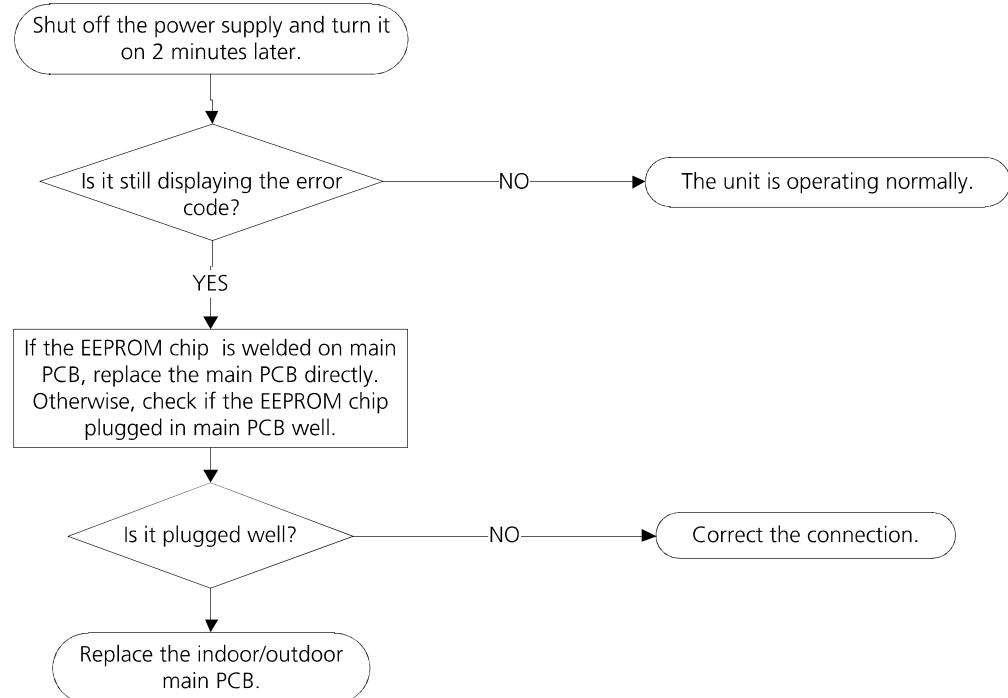

Remarks:

The location of the EEPROM chip on the indoor and outdoor PCB is shown in the following two images:

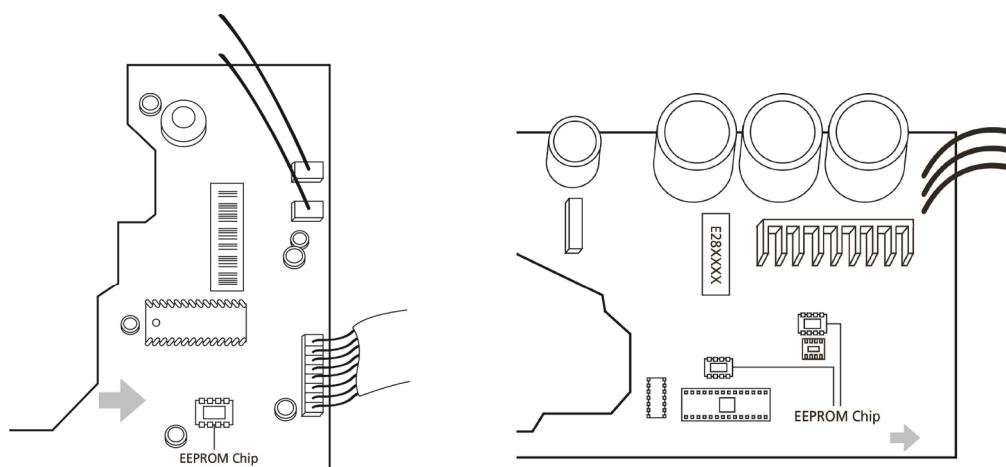

Note: These images are for reference only.


5.3 E1 (Indoor and outdoor unit communication error)

Description: The indoor unit has not received feedback from the outdoor unit for 110 seconds, four consecutive times.

Recommended parts to prepare:


- Faulty indoor PCB
- Faulty outdoor PCB
- Faulty reactor

Troubleshooting and repair:

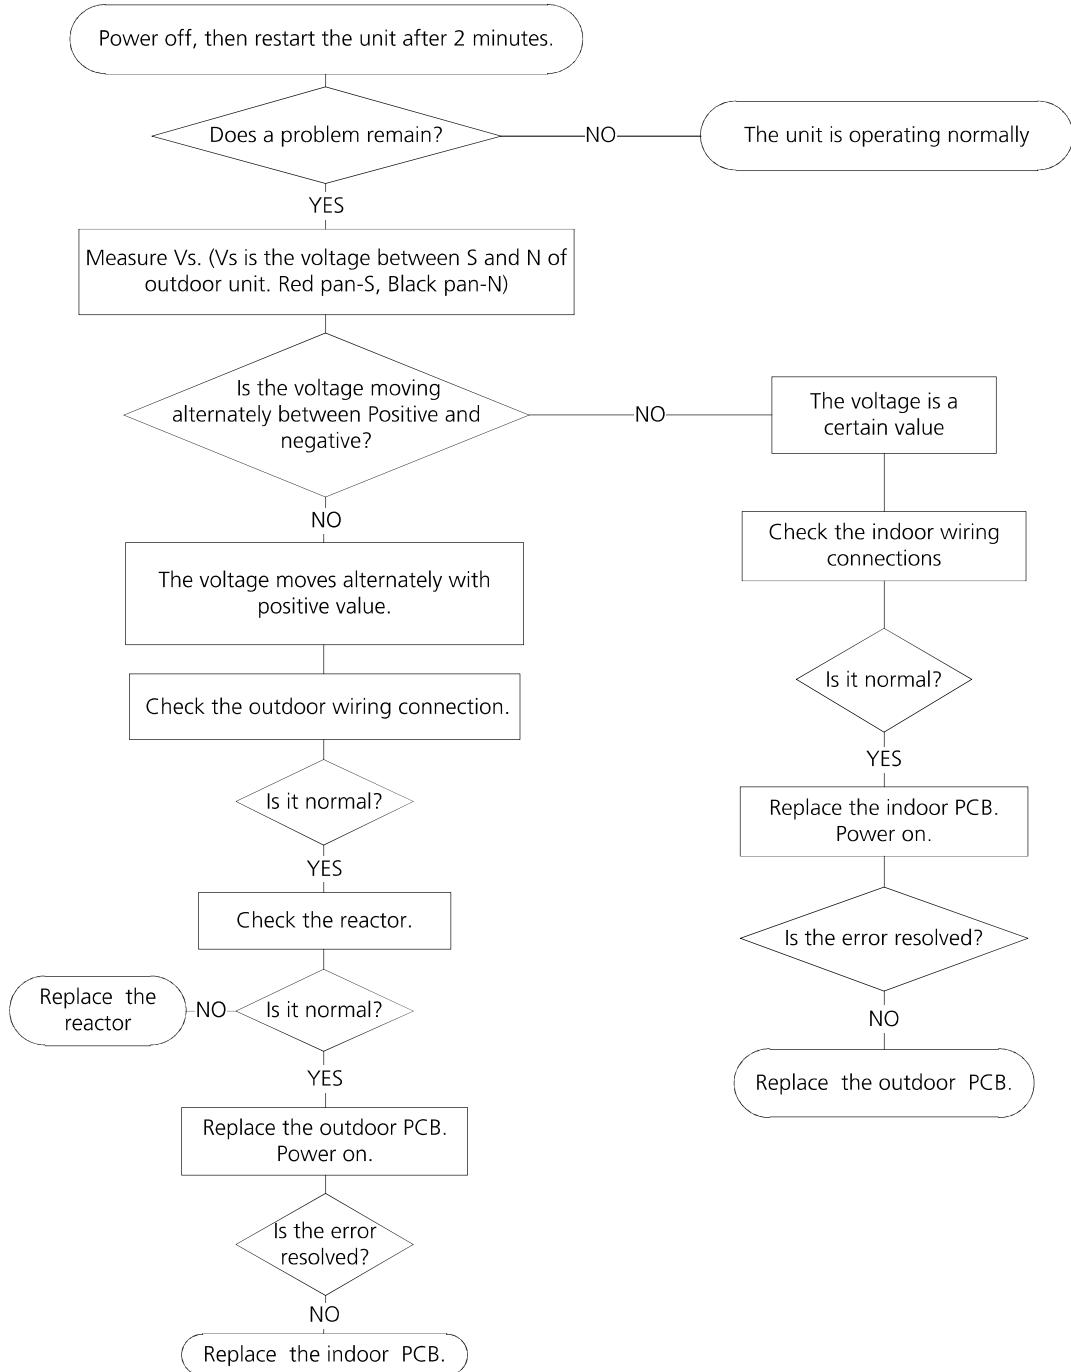

Remarks:

- Use a multimeter to test the DC voltage between 2 port and 3 port of outdoor unit. The red pin of multimeter connects with 2 port while the black pin is for 3 port.
- When AC is normal running, the voltage will move alternately between -25V to 25V.
- If the outdoor unit has malfunction, the voltage will move alternately with positive value.
- While if the indoor unit has malfunction, the voltage will be a certain value.

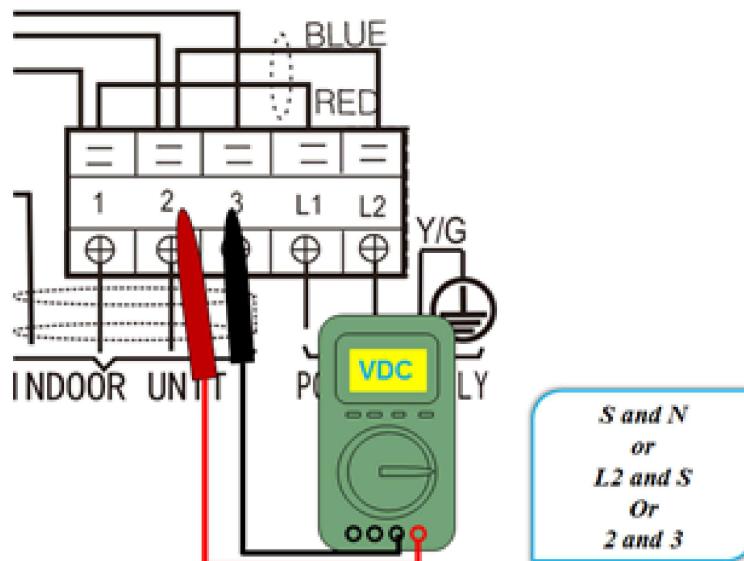

- Use a multimeter to test the resistance of the reactor which does not connect with capacitor.
- The normal value should be around zero ohm. Otherwise, the reactor must have malfunction and need to be replaced.




5.4 E2 (Zero crossing detection error diagnosis and solution)

Description: When PCB does not receive zero crossing signal feedback for 4 minutes or the zero crossing signal time interval is abnormal.

Recommended parts to prepare:

- Connection mistake
- PCB faulty

Troubleshooting and repair:

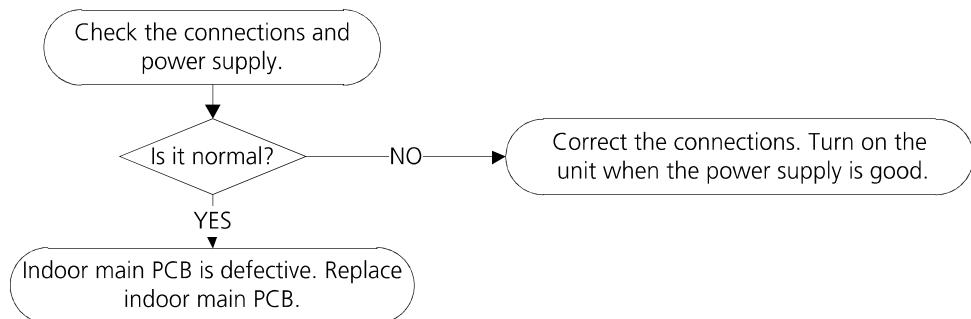


5.5 E3/F5(Fan speed has been out of control diagnosis and solution)

Description: When the indoor fan speed registers below 200RPM or over 2100RPM for an extended period of time, the unit will stop and the LED will display the failure(E3). When the outdoor fan speed registers below 200RPM or over 1500RPM for an extended period of time, the unit will stop and the LED will display the failure(F5).

Recommended parts to prepare:

- Wiring mistake
- Faulty fan assembly
- Faulty fan motor
- Faulty PCB

Troubleshooting and repair:

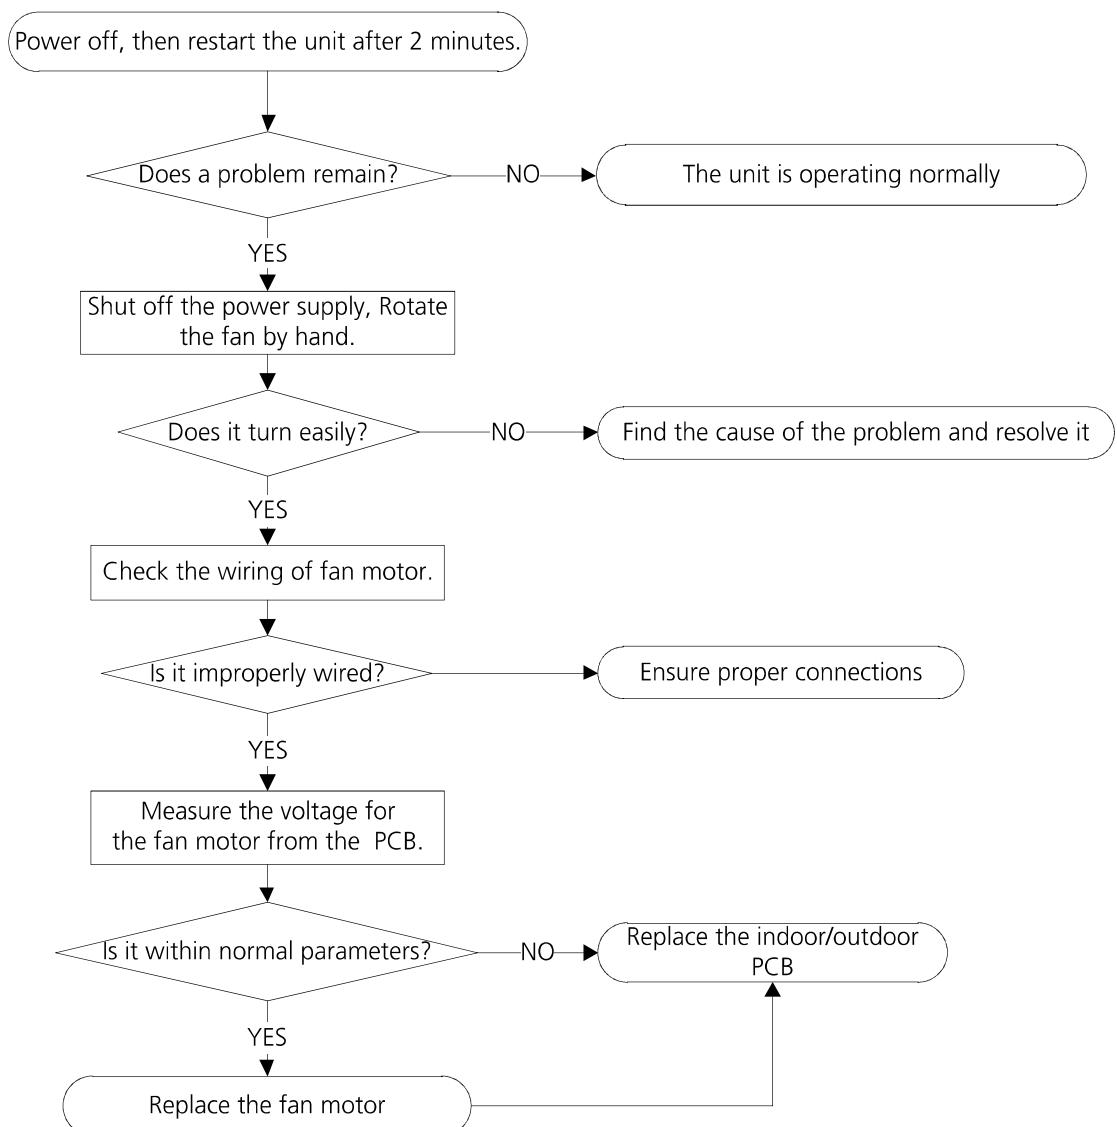


Index:

1. Indoor or Outdoor DC Fan Motor(control chip is in fan motor)

Power on and when the unit is in standby, measure the voltage of pin1-pin3, pin4-pin3 in fan motor connector. If the value of the voltage is not in the range showing in below table, the PCB must has problems and need to be replaced.


- DC motor voltage input and output (voltage: 220-240V~):

No.	Color	Signal	Voltage
1	Red	V _s /V _m	280V~380V
2	---	---	---
3	Black	GND	0V
4	White	V _{cc}	14-17.5V
5	Yellow	V _{sp}	0~5.6V
6	Blue	FG	14-17.5V

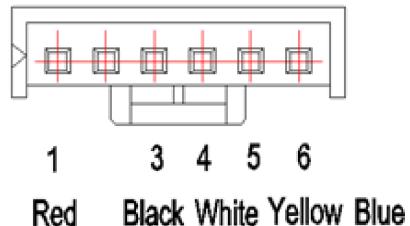

2. Indoor AC Fan Motor

Power on and set the unit running in fan mode at high fan speed. After running for 15 seconds, measure the voltage of pin1 and pin2. If the value of the voltage is less than 100V(208~240V power supply) or 50V(115V power supply), the PCB must has problems and need to be replaced.

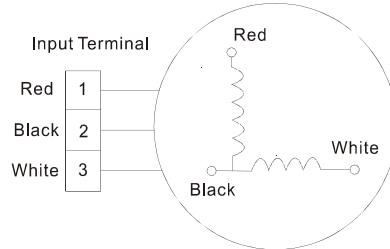



5.6 E4/E5/F1/F2/F3 (Open circuit or short circuit of temperature sensor diagnosis and solution)

Description: If the sampling voltage is lower than 0.06V or higher than 4.94V, the LED will display the failure.

Recommended parts to prepare:

- Wiring mistake
- Faulty sensor
- Faulty PCB

Troubleshooting and repair:

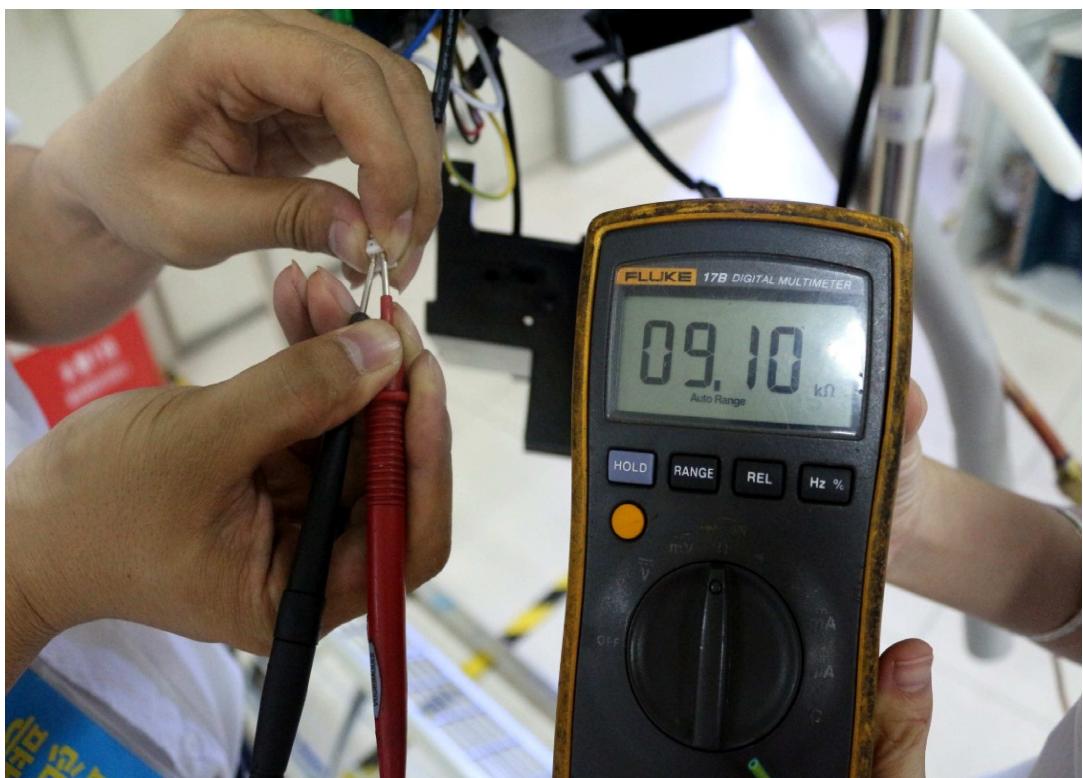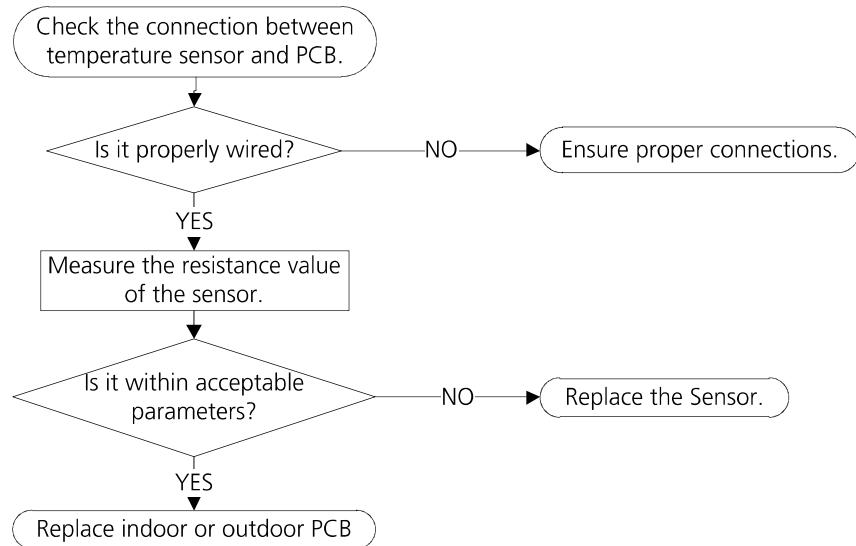


5.7 Eb(Communication error between the indoor PCB and display board)

Description: Indoor PCB does not receive feedback from Display board.

Recommended parts to prepare:

- Wiring mistake
- Faulty indoor PCB
- Display board malfunction

Troubleshooting and repair:

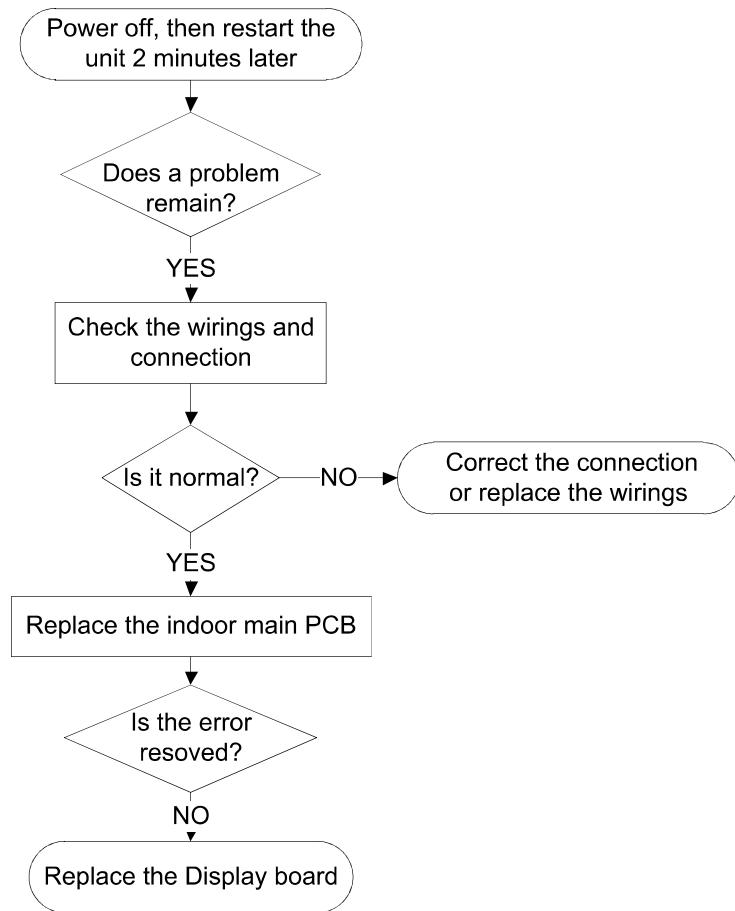


5.8 F0(Overload current protection diagnosis and solution)

Description: An abnormal current rise is detected by checking the specified current detection circuit.

Recommended parts to prepare:

- Power supply problems.
- System blockage
- Faulty outdoor PCB
- Wiring mistake
- Compressor malfunction

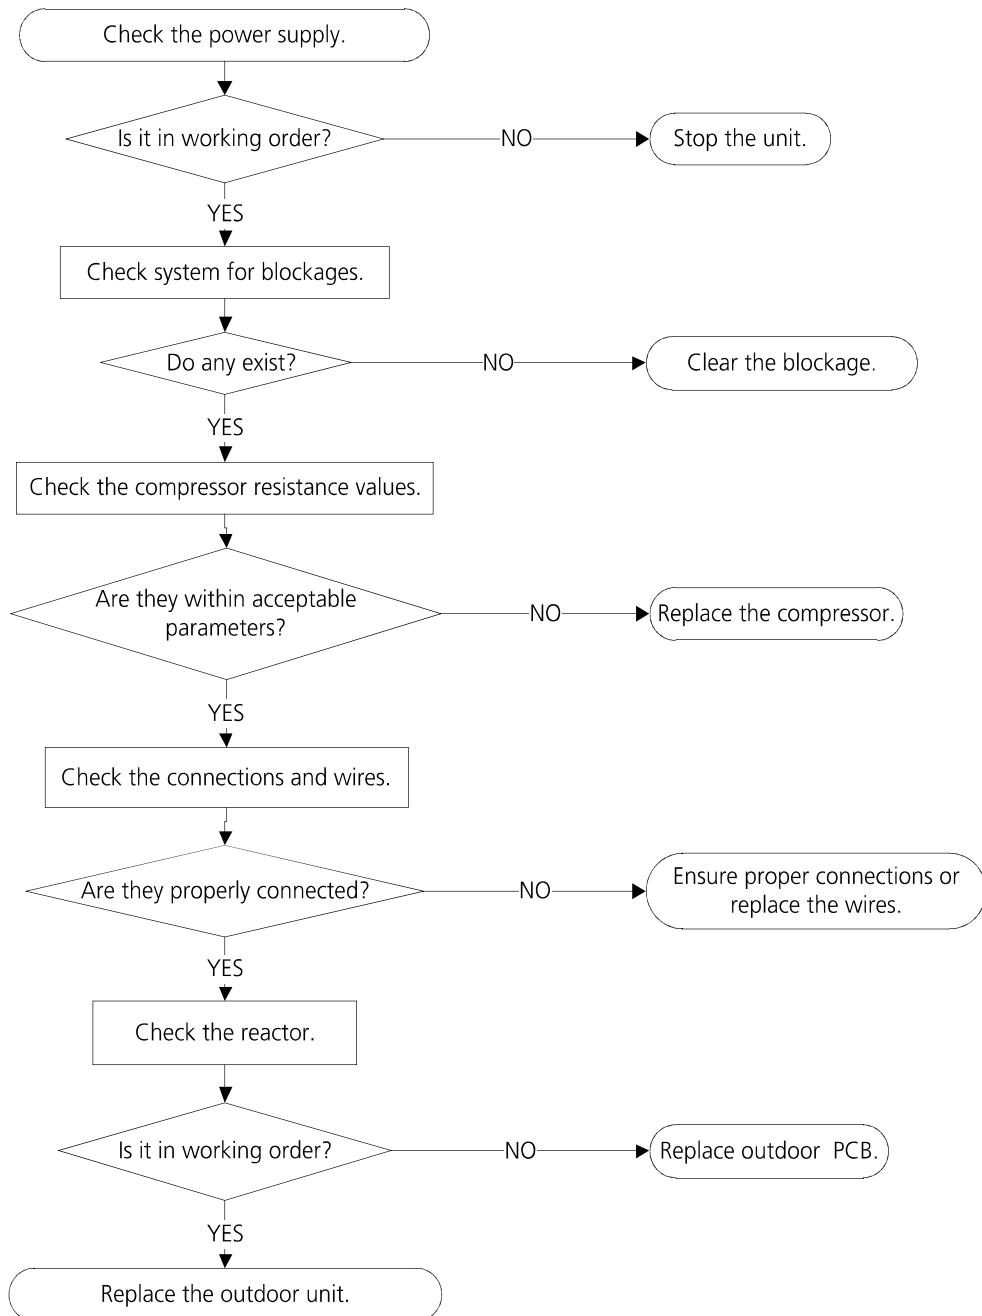


5.9 P0(IPM malfunction or IGBT over-strong current protection diagnosis and solution)

Description: When the voltage signal the IPM sends to the compressor drive chip is abnormal, the display LED shows "P0" and the AC turn off.

Recommended parts to prepare:

- Wiring mistake
- IPM malfunction
- Faulty outdoor fan assembly
- Compressor malfunction
- Faulty outdoor PCB

Troubleshooting and repair:

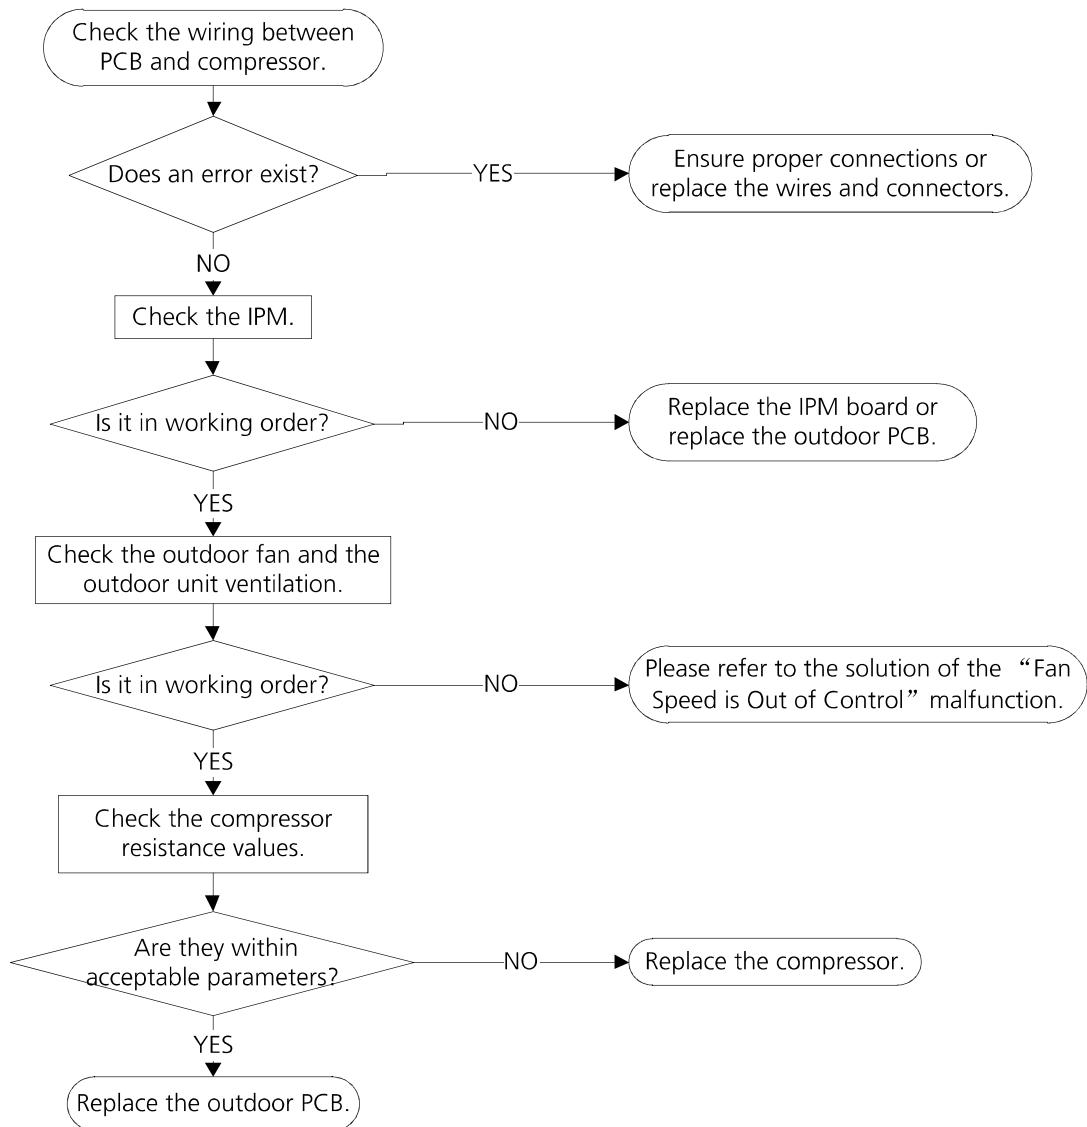


5.10 P1(Over voltage or too low voltage protection diagnosis and solution)

Description: Abnormal increases or decreases in voltage are detected by checking the specified voltage detection circuit.

Recommended parts to prepare:

- Power supply issues
- System leakage or blockage
- Faulty outdoor PCB

Troubleshooting and repair:

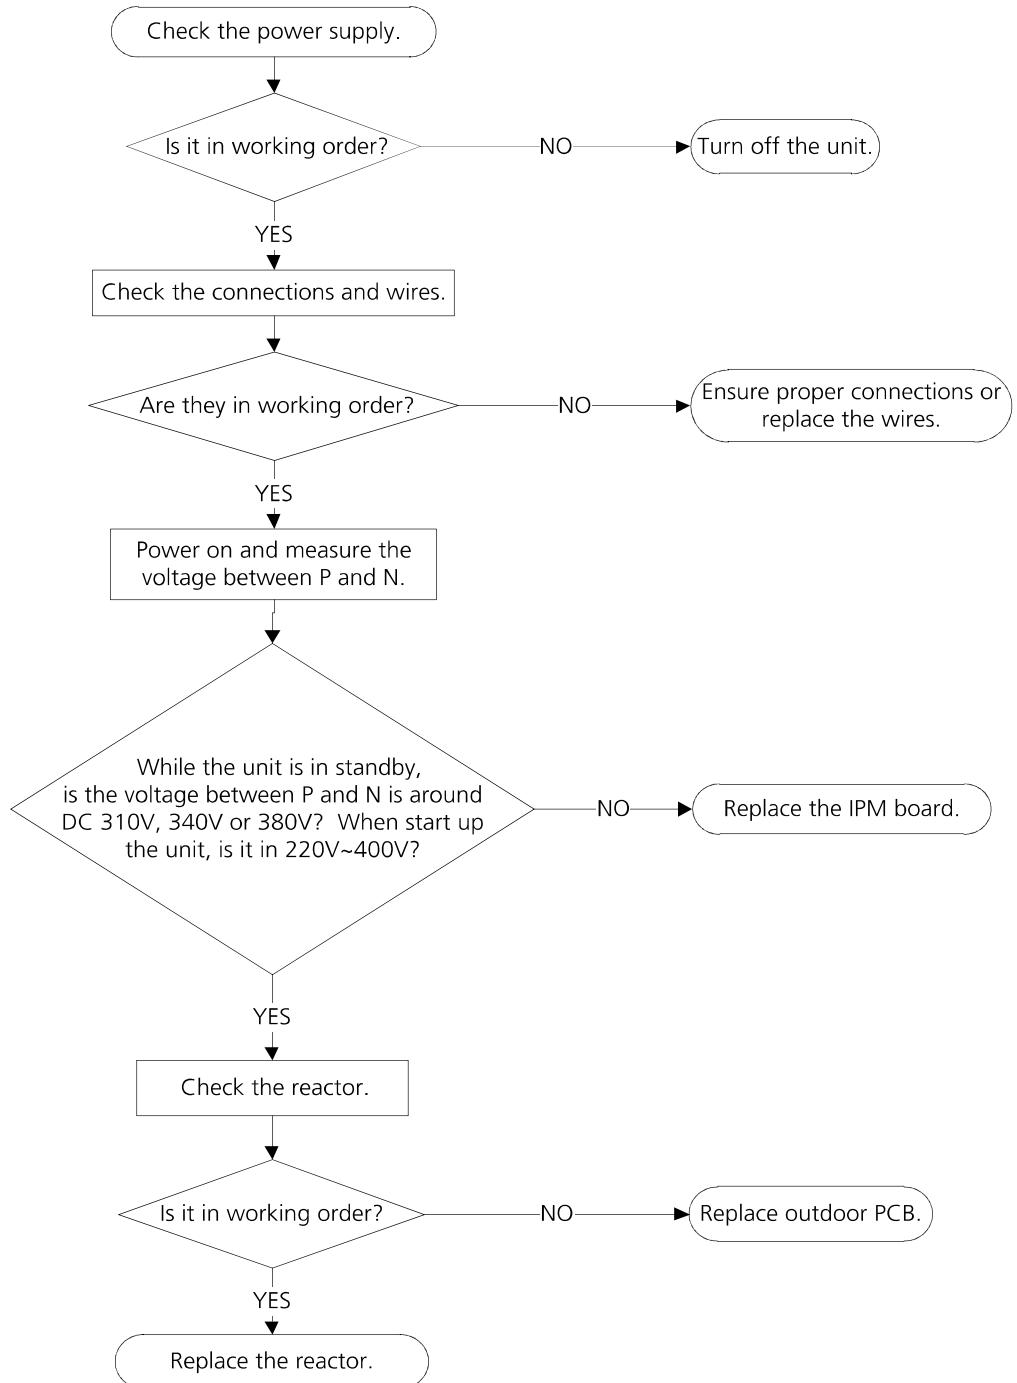


5.11 P2(High temperature protection of IPM module or compressor top diagnosis and solution)

Description: If the sampling voltage is not at 5V, the LED displays this failure code.

Recommended parts to prepare:

- Power supply issues
- System leakage or blockages
- Faulty outdoor PCB
- Connection problems

Troubleshooting and repair:

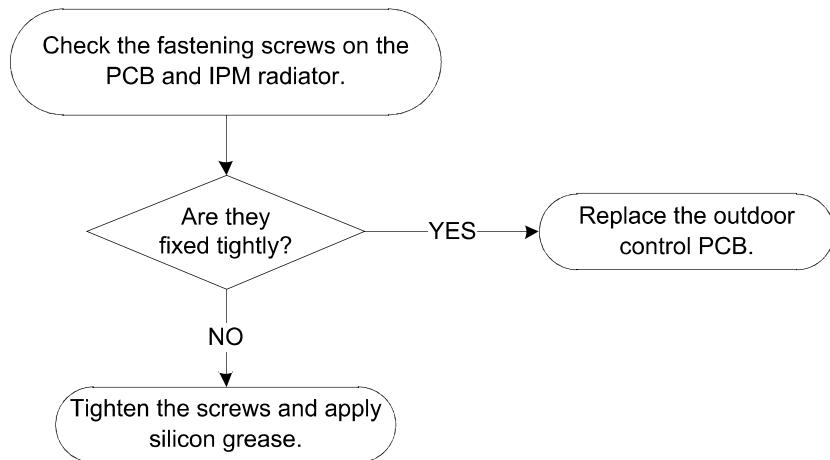


5.12 P4(Inverter compressor drive error diagnosis and solution)

Description: An abnormal inverter compressor drive is detected by a special detection circuit, including communication signal detection, voltage detection, compressor rotation speed signal detection and so on.

Recommended parts to prepare:

- Wiring mistake
- IPM malfunction
- Faulty outdoor fan assembly
- Compressor malfunction
- Faulty outdoor PCB

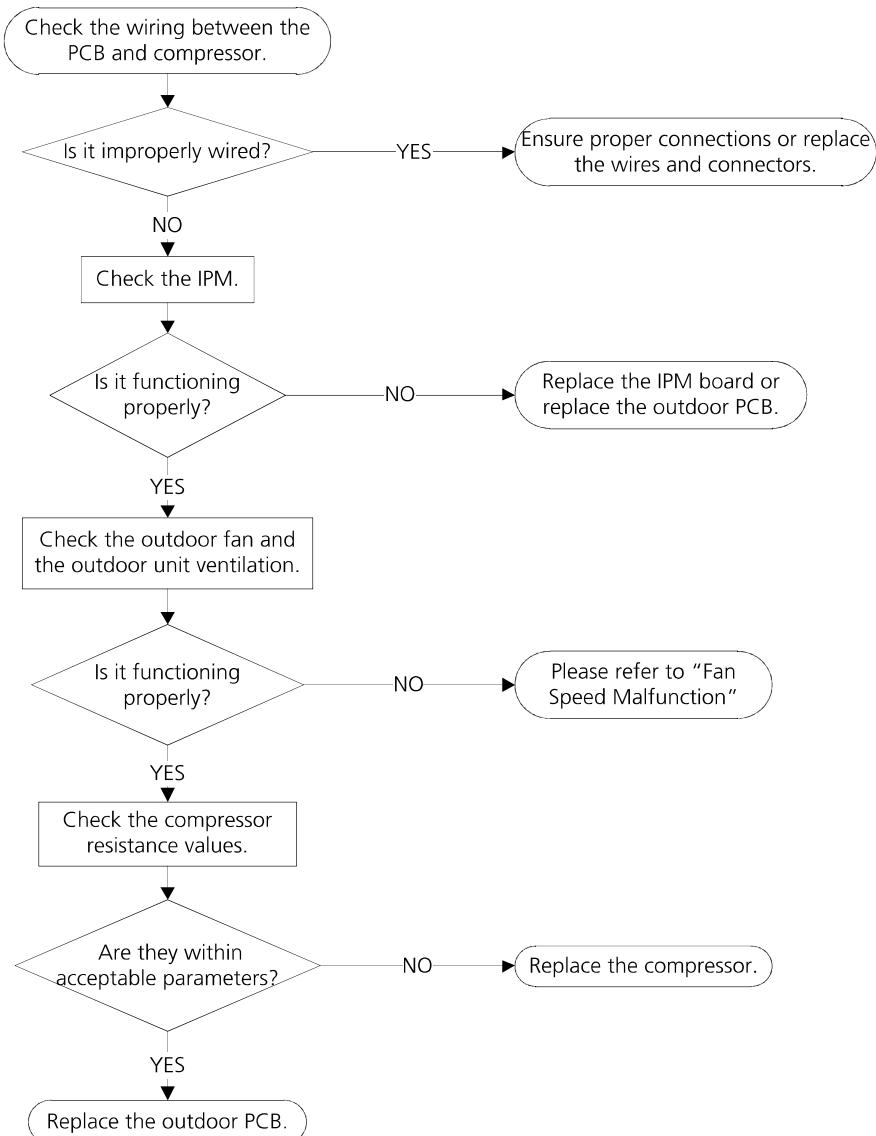

Contents

i)	Temperature Sensor Resistance Value Table for T1, T2, T3, and T4 (°C – K)	87
ii)	Temperature Sensor Resistance Value Table for TP (°C --K).....	88
iii)	Pressure On Service Port	89

i) Temperature Sensor Resistance Value Table for T1,T2,T3 and T4 (°C – K)

°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm
-20	-4	115.266	20	68	12.6431	60	140	2.35774	100	212	0.62973
-19	-2	108.146	21	70	12.0561	61	142	2.27249	101	214	0.61148
-18	0	101.517	22	72	11.5	62	144	2.19073	102	216	0.59386
-17	1	96.3423	23	73	10.9731	63	145	2.11241	103	217	0.57683
-16	3	89.5865	24	75	10.4736	64	147	2.03732	104	219	0.56038
-15	5	84.219	25	77	10	65	149	1.96532	105	221	0.54448
-14	7	79.311	26	79	9.55074	66	151	1.89627	106	223	0.52912
-13	9	74.536	27	81	9.12445	67	153	1.83003	107	225	0.51426
-12	10	70.1698	28	82	8.71983	68	154	1.76647	108	226	0.49989
-11	12	66.0898	29	84	8.33566	69	156	1.70547	109	228	0.486
-10	14	62.2756	30	86	7.97078	70	158	1.64691	110	230	0.47256
-9	16	58.7079	31	88	7.62411	71	160	1.59068	111	232	0.45957
-8	18	56.3694	32	90	7.29464	72	162	1.53668	112	234	0.44699
-7	19	52.2438	33	91	6.98142	73	163	1.48481	113	235	0.43482
-6	21	49.3161	34	93	6.68355	74	165	1.43498	114	237	0.42304
-5	23	46.5725	35	95	6.40021	75	167	1.38703	115	239	0.41164
-4	25	44	36	97	6.13059	76	169	1.34105	116	241	0.4006
-3	27	41.5878	37	99	5.87359	77	171	1.29078	117	243	0.38991
-2	28	39.8239	38	100	5.62961	78	172	1.25423	118	244	0.37956
-1	30	37.1988	39	102	5.39689	79	174	1.2133	119	246	0.36954
0	32	35.2024	40	104	5.17519	80	176	1.17393	120	248	0.35982
1	34	33.3269	41	106	4.96392	81	178	1.13604	121	250	0.35042
2	36	31.5635	42	108	4.76253	82	180	1.09958	122	252	0.3413
3	37	29.9058	43	109	4.5705	83	181	1.06448	123	253	0.33246
4	39	28.3459	44	111	4.38736	84	183	1.03069	124	255	0.3239
5	41	26.8778	45	113	4.21263	85	185	0.99815	125	257	0.31559
6	43	25.4954	46	115	4.04589	86	187	0.96681	126	259	0.30754
7	45	24.1932	47	117	3.88673	87	189	0.93662	127	261	0.29974
8	46	22.5662	48	118	3.73476	88	190	0.90753	128	262	0.29216
9	48	21.8094	49	120	3.58962	89	192	0.8795	129	264	0.28482
10	50	20.7184	50	122	3.45097	90	194	0.85248	130	266	0.2777
11	52	19.6891	51	124	3.31847	91	196	0.82643	131	268	0.27078
12	54	18.7177	52	126	3.19183	92	198	0.80132	132	270	0.26408
13	55	17.8005	53	127	3.07075	93	199	0.77709	133	271	0.25757
14	57	16.9341	54	129	2.95896	94	201	0.75373	134	273	0.25125
15	59	16.1156	55	131	2.84421	95	203	0.73119	135	275	0.24512
16	61	15.3418	56	133	2.73823	96	205	0.70944	136	277	0.23916
17	63	14.6181	57	135	2.63682	97	207	0.68844	137	279	0.23338
18	64	13.918	58	136	2.53973	98	208	0.66818	138	280	0.22776
19	66	13.2631	59	138	2.44677	99	210	0.64862	139	282	0.22231

ii) Temperature Sensor Resistance Value Table for TP (°C --K)

°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm
°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm
-20	-4	542.7	20	68	68.66	60	140	13.59	100	212	3.702
-19	-2	511.9	21	70	65.62	61	142	13.11	101	214	3.595
-18	0	483	22	72	62.73	62	144	12.65	102	216	3.492
-17	1	455.9	23	73	59.98	63	145	12.21	103	217	3.392
-16	3	430.5	24	75	57.37	64	147	11.79	104	219	3.296
-15	5	406.7	25	77	54.89	65	149	11.38	105	221	3.203
-14	7	384.3	26	79	52.53	66	151	10.99	106	223	3.113
-13	9	363.3	27	81	50.28	67	153	10.61	107	225	3.025
-12	10	343.6	28	82	48.14	68	154	10.25	108	226	2.941
-11	12	325.1	29	84	46.11	69	156	9.902	109	228	2.86
-10	14	307.7	30	86	44.17	70	158	9.569	110	230	2.781
-9	16	291.3	31	88	42.33	71	160	9.248	111	232	2.704
-8	18	275.9	32	90	40.57	72	162	8.94	112	234	2.63
-7	19	261.4	33	91	38.89	73	163	8.643	113	235	2.559
-6	21	247.8	34	93	37.3	74	165	8.358	114	237	2.489
-5	23	234.9	35	95	35.78	75	167	8.084	115	239	2.422
-4	25	222.8	36	97	34.32	76	169	7.82	116	241	2.357
-3	27	211.4	37	99	32.94	77	171	7.566	117	243	2.294
-2	28	200.7	38	100	31.62	78	172	7.321	118	244	2.233
-1	30	190.5	39	102	30.36	79	174	7.086	119	246	2.174
0	32	180.9	40	104	29.15	80	176	6.859	120	248	2.117
1	34	171.9	41	106	28	81	178	6.641	121	250	2.061
2	36	163.3	42	108	26.9	82	180	6.43	122	252	2.007
3	37	155.2	43	109	25.86	83	181	6.228	123	253	1.955
4	39	147.6	44	111	24.85	84	183	6.033	124	255	1.905
5	41	140.4	45	113	23.89	85	185	5.844	125	257	1.856
6	43	133.5	46	115	22.89	86	187	5.663	126	259	1.808
7	45	127.1	47	117	22.1	87	189	5.488	127	261	1.762
8	46	121	48	118	21.26	88	190	5.32	128	262	1.717
9	48	115.2	49	120	20.46	89	192	5.157	129	264	1.674
10	50	109.8	50	122	19.69	90	194	5	130	266	1.632
11	52	104.6	51	124	18.96	91	196	4.849			
12	54	99.69	52	126	18.26	92	198	4.703			
13	55	95.05	53	127	17.58	93	199	4.562			
14	57	90.66	54	129	16.94	94	201	4.426			
15	59	86.49	55	131	16.32	95	203	4.294			
16	61	82.54	56	133	15.73	96	205	4.167			
17	63	78.79	57	135	15.16	97	207	4.045			
18	64	75.24	58	136	14.62	98	208	3.927			
19	66	71.86	59	138	14.09	99	210	3.812			


iii) Pressure On Service Port(R32)

Cooling chart:

°F(°C)	ODT IDT	0(-17)	5(-15)	15 (9.44)	45 (7.22)	75 (23.89)	85 (29.44)	95 (35)	105 (40.56)	115 (46.11)	120 (48.89)
BAR	70/59	6.5	6.6	7.4	8.2	8.4	8.0	8.3	8.8	10.3	10.8
BAR	75/63	6.8	6.9	8.1	8.8	8.8	8.5	8.9	9.3	10.9	11.4
BAR	80/67	7.2	7.3	8.7	9.7	9.5	9.1	9.3	9.8	11.4	12.1
BAR	90/73	7.9	8.0	9.8	10.7	10.5	9.7	10.2	10.8	12.6	13.3

°F(°C)	ODT IDT	0(-17)	5(-15)	15 (9.44)	45 (7.22)	75 (23.89)	85 (29.44)	95 (35)	105 (40.56)	115 (46.11)	120 (48.89)
PSI	70/59	95	96	108	118	121	115	119	128	150	157
PSI	75/63	99	101	117	128	126	122	129	135	158	165
PSI	80/67	105	106	125	141	138	132	135	143	165	176
PSI	90/73	114	115	142	155	152	141	148	157	184	193

°F(°C)	ODT IDT	0(-17)	5(-15)	15 (9.44)	45 (7.22)	75 (23.89)	85 (29.44)	95 (35)	105 (40.56)	115 (46.11)	120 (48.89)
MPA	70/59	0.65	0.66	0.74	0.82	0.84	0.80	0.83	0.88	1.03	1.08
MPA	75/63	0.68	0.69	0.81	0.88	0.88	0.85	0.89	0.93	1.09	1.14
MPA	80/67	0.72	0.73	0.87	0.97	0.95	0.91	0.93	0.98	1.14	1.21
MPA	90/73	0.79	0.80	0.98	1.07	1.05	0.97	1.02	1.08	1.26	1.33

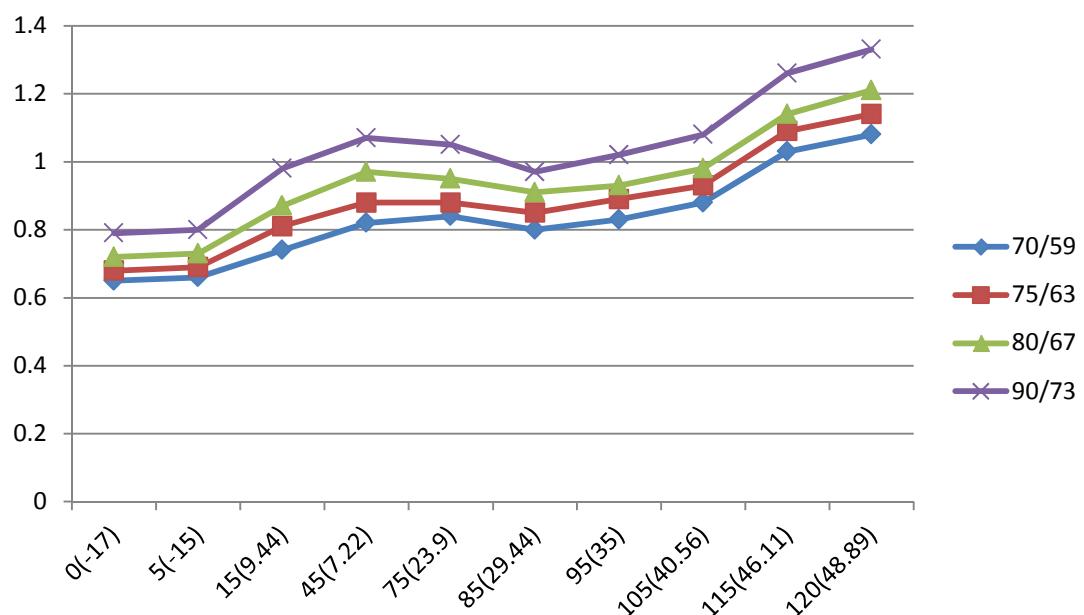

Heating chart:

$^{\circ}\text{F} (^{\circ}\text{C})$	ODT IDT	57/53 (13.89/11.67)	47/43 (8.33/6.11)	37/33 (2.78/0.56)	27/23 (-2.78/-5)	17/13 (-8.33/-10.56)	0/-2 (-17/-19)	-17/-18 (-27/-28)
BAR	55	30.9	29.1	25.8	23.3	21.2	18.9	16.8
BAR	65	33.2	30.6	27.1	25.9	23.8	20.9	19.4
BAR	75	34.5	32.1	28.4	26.8	25.4	21.9	20.4

$^{\circ}\text{F} (^{\circ}\text{C})$	ODT IDT	57/53 (13.89/11.67)	47/43 (8.33/6.11)	37/33 (2.78/0.56)	27/23 (-2.78/-5)	17/13 (-8.33/-10.56)	0/-2 (-17/-19)	-17/-18 (-27/-28)
PSI	55	448	421	374	337	308	273	244
PSI	65	480	444	394	375	346	303	282
PSI	75	499	466	411	389	369	318	296

$^{\circ}\text{F} (^{\circ}\text{C})$	ODT IDT	57/53 (13.89/11.67)	47/43 (8.33/6.11)	37/33 (2.78/0.56)	27/23 (-2.78/-5)	17/13 (-8.33/-10.56)	0/-2 (-17/-19)	-17/-18 (-27/-28)
MPA	55	3.09	2.91	2.58	2.33	2.12	1.89	1.68
MPA	65	3.32	3.06	2.71	2.59	2.38	2.09	1.94
MPA	75	3.45	3.21	2.84	2.68	2.54	2.19	2.04

